



WARRANTY

Help Line

in material and workmanship for the lifetime of the shredder. If any part is found to be defective please contact us or your dealer.

Our promise to you is quite simple. Fellowes shredders are built stronger, engineered to run longer, resist jams and power through large jobs. The Fellowes worry free warranty described below covers option and expense, of the defective part. This warranty does not apply in cases of abuse, mishandling, the performance of the product, provides for prompt service and support, plus a lifetime cutter or unauthorized repair. ANY IMPLIED WARRANTY, INCLUDING THAT OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, IS HEREBY LIMITED IN DURATION TO THE APPROPRIATE WARRANTY PERIOD SET FORTH ABOVE. In no event shall Fellowes be liable for any consequential or incidental Limited Warranty: Fellowes, Inc. ("Fellowes") warrants the parts of the machine to be free of defects damages attributable to this product. This warranty gives you specific legal rights. The duration, terms, in material and workmanship and provides service and support for 3 years from the date of purchase by the original consumer. Fellowes warrants the cutting blades of the machine to be free from defects or conditions may be required by local law. For more details or to obtain service under this warranty, C-120j/C-120Cj

Please read these instructions before use. Do not discard: keep for future reference.



Australia +1-800-33-11-77 Canada +1-800-665-4339

00-800-1810-1810 Europe +1-800-234-1185 Mexico +1-800-955-0959 United States

Fellowes. 1789 Norwood Avenue, Itasca, Illinois 60143-1095 • USA • 630-893-1600

www.fellowes.com

Australia Canada Deutschland Polska **United Kingdom** France Japan **United States** Benelux China España Italia Koreva Singapore



ENGLISH

Model C-120i/C-120Ci

•	SafeSense® Technology	F.	Basket (CD)
	Panar antry	G	Saa confaty instructions

C. CD entry

D. Door

I. Disconnect power switch J. Shipping bolts (wing nuts) E. Basket (paper) To be removed prior to operation

H. Casters (2)

K. Control Panel and LEDs

| ⊲⊲ 1. Reverse **★** 6. Remove paper

♠ 2. ON/OFF 7. Overheat 3. Forward 8. Sheet capacity indicator

9. SafeSense® indicator (yellow) 4. Bin full 5. Door open 10 Auto button

CAPABILITIES

Will shred: Paper, credit cards, CD/DVD's, staples and small paper clips

Will not shred: Adhesive labels, continuous form paper, transparencies, newspaper cardboard, large paper clips, laminates, file folders, X-rays or plastic other than noted above

Paper shred size:

Cross-Cut	.5/32 inches x 1-1/2 inches (3.9mm x 38mm)
Strip Cut	7/32 inches (5.8mm)

Maximum:

Sheets per pass	18
CDs/Cards per pass	
Paper entry width	
Po ,	/ (200

*8.5 inches x11 inches, 20lb., (75g) paper at 120V, 60 Hz, C-120i 6 Amps, C-120Ci 8 Amps; heavier paper, humidity or other than rated voltage may reduce capacity. Recommended daily usage rates: 100-150 paper passes: 100 cards: 10 CDs

Fellowes SafeSense® shredders are designed to be operated in office environments ranging between 50 - 80 degrees Fahrenheit (10 - 26 degrees Celsius) and 40 - 80% relative humidity.

ADVANCED PRODUCT FEATURES



Jam Proof System

Eliminates frustrating jams by preventing overloads and powering through misfed paper



Patented SafeSense® Technology

Stops shredder immediately when hands are too close to the paper entry



 
Sleep Mode

Energy saving feature shuts down automatically after 2 minutes of no shredding activity

 
AWARNING: IMPORTANT SAFETY INSTRUCTIONS — Read Before Using!





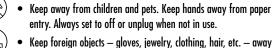



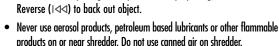


from shredder openings. If object enters top opening, switch to



- Do not use if damaged or defective. Do not disassemble shredder. Do not place near or over heat source or water.
- This shredder has a Disconnect Power Switch (I) that must be in the ON (1) position to operate shredder. In case of emergency, move switch to OFF (0) position. This action will stop shredder immediately.

- Avoid touching exposed cutting blades under shredder head.
- Keep finger away from CD hole when shredding.
- Do not put foreign objects in paper entry.
- The grounded socket-outlet shall be installed near the equipment and shall be
- WARNING: Shredder Stability Secure Shredder to wall with hardware provided following the instructions under Installation Instructions.
- Product is intended for commercial use only, and not for use around children.

INSTALLATION INSTRUCTIONS

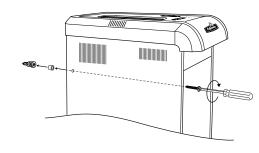


- 1. Place shredder against the wall (drywall, wooden, or concrete). Mark screw locations on wall through back of cabinet.
- 2. Drill 1/4" hole in wall for the anchor plugs.
- 3. Insert white plastic anchor plugs into drilled holes.
- 4. Insert (2) screws through back of cabinet and thread black rubber spacer onto the screw.
- 5. From inside cabinet use Phillips screw driver to secure shredder to the wall.

 BASIC SHREDDING OPERATION





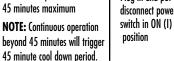



Press (🖰) ON to activate



Feed paper/card straight into paper entry and release



Hold CD at edge. To shred CDs rotate CD flap into place feed into CD entry and release



When finished shredding set to OFF (\circlearrowleft)




Do nothing and shredder will ao automatically to sleep mode

www.fellowes.com features an extensive on-line support section with a number of self-service options

100% JAM PROOF SYSTEM OPERATION*

Eliminates frustrating jams by preventing overloads and powering through misfed paper.

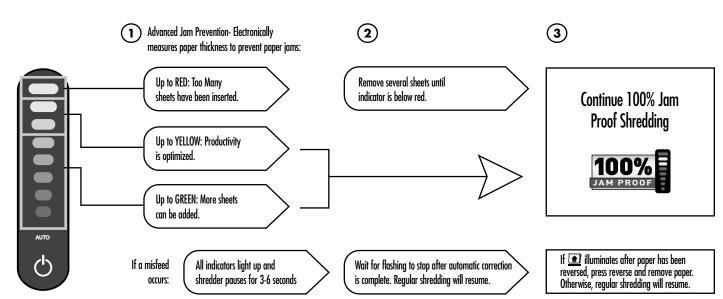

^{*100%} Jam Proof when used in accordance with user manual

SLEEP MODE

WHEN IN SLEEP MODE







insert paper touch control panel

(🖒) to activate SafeSense®

SET-UP AND TESTING



SAFESENSE® TECHNOLOGY OPERATION

Touch test area and look for the SafeSense® indicator to illuminate



SafeSense® is active an working properly

PREVENTIVE MAINTENANCE AND MISCELLANEOUS TROUBLESHOOTING

- For peak performance, we recommend oiling shredder each time waste bin is emptied. Only use a non-aerosol vegetable oil. Machines not oiled may lose sheet capacity, become noisy, and ultimately, stop running.
- Though paper detection sensors are designed to be maintenance free, the sensors occasionally become blocked by paper dust, causing the motor to run even if there is no paper present. Both sensors are located in the center of the paper entry.
- Self Cleaning Cycle: Shredder periodically cycles in forward and reverse lasting 3-6 seconds.
- Empty wastebasket when bin full indicator lights up.
- Shredder won't run if the door is open, or bin needs to be emptied.
- Maintenance is an important part of protecting your investment. Don't forget our oil (35250) and shredder bags (36054).
- When shredding for a prolonged period of time, the motor can become warm and require a cool down period. When this occurs the overheat indicator will alert you to the problem, this model will require 45 minutes to cool down.

Go to Support Section at www.fellowes.com or see back page of manual for useful telephone numbers.

3