

**Fellowes**  
AIR PURIFIERS

# Quick Start Guide



**AERAMAX<sup>®</sup> PRO AM2**



This guide is for machine set-up. For full installation guidelines, please refer to the product documentation that came with the unit, or visit <http://support.fellowes.com>


---

---

# Welcome to Healthy Air


---

# Setting up your air purifier

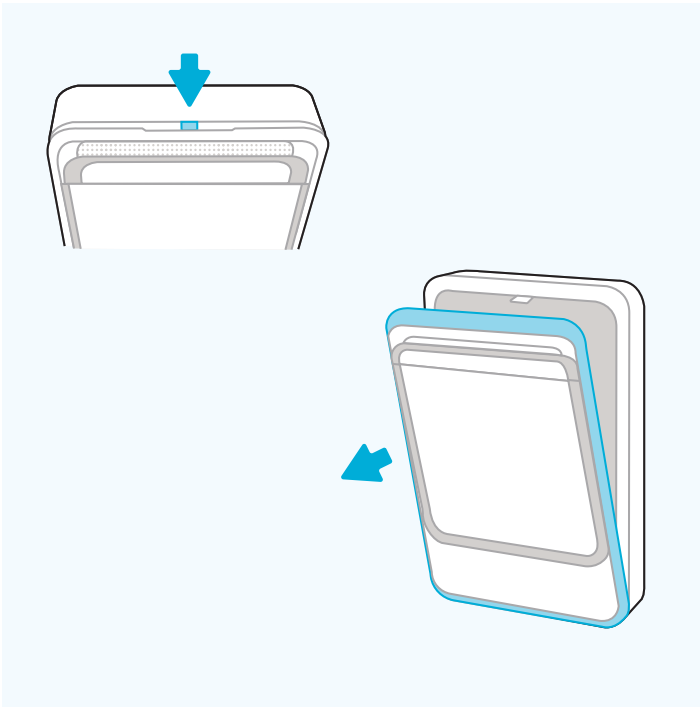


**01**

- » Press the access panel latch located at the top of the unit down while pulling the front panel towards you.

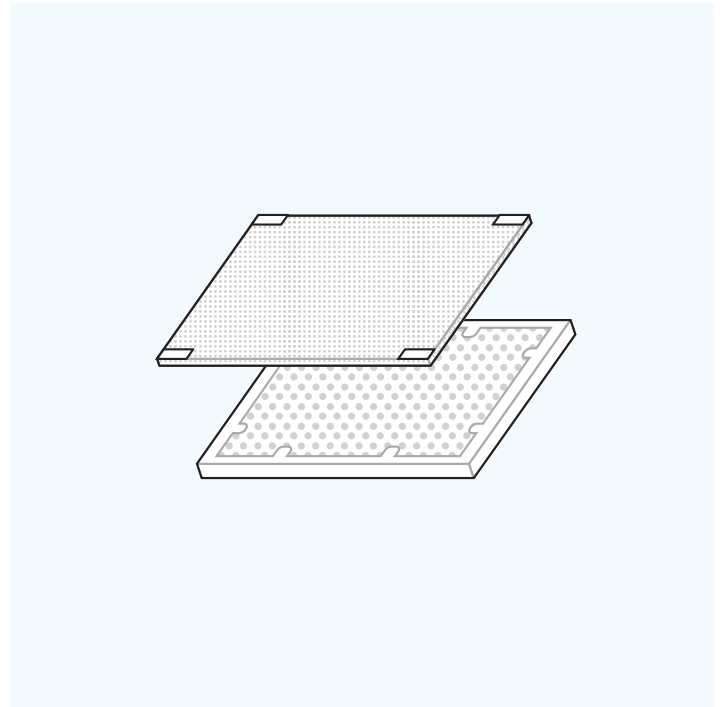


**02**

- » Remove bag from filters.

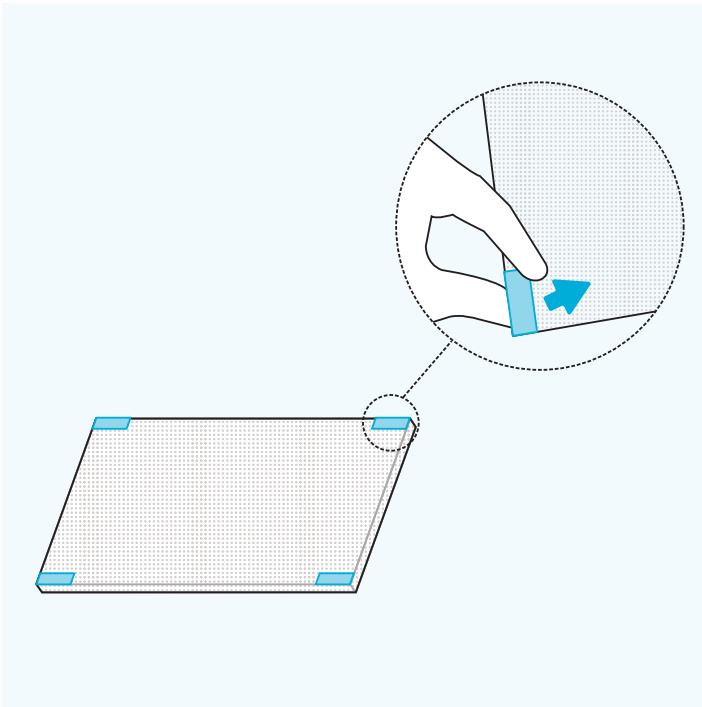


**03**

» Peel adhesive back on 4 corners of green pre-filter.

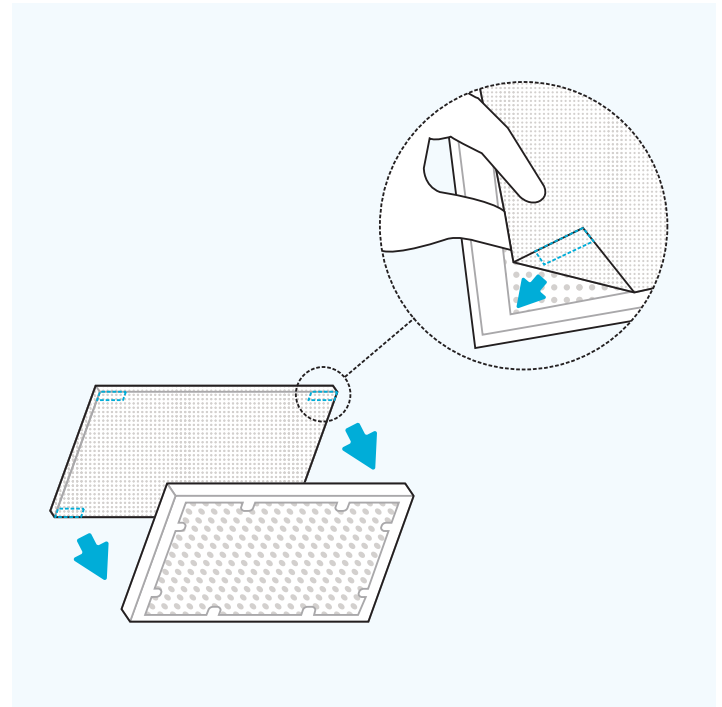


**04**

» Adhere pre-filter over the black carbon side of the hybrid HEPA filter.

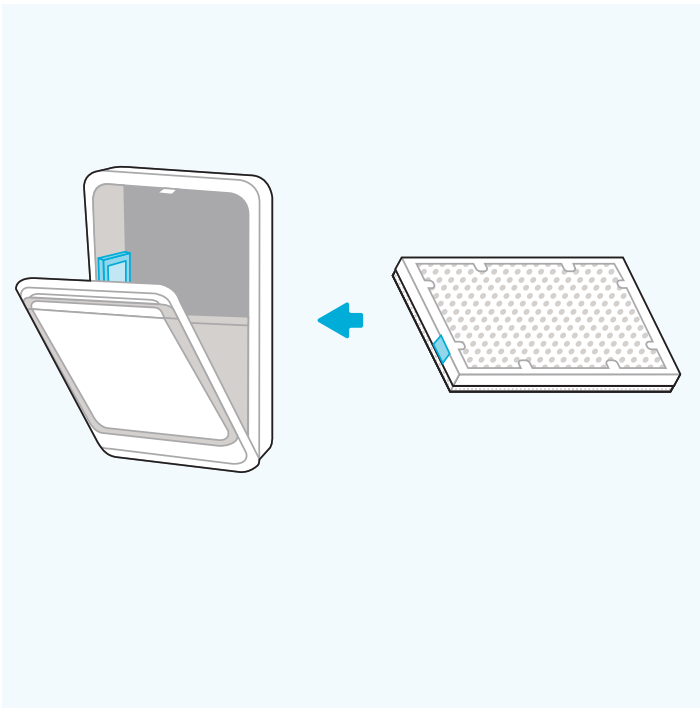
**05**

- » Align the AeraMax Pro Certified Filter stickers on the filter and the inside of the unit.
- » Insert filters and ensure the green pre-filter goes in first. The HEPA filter should be facing out.

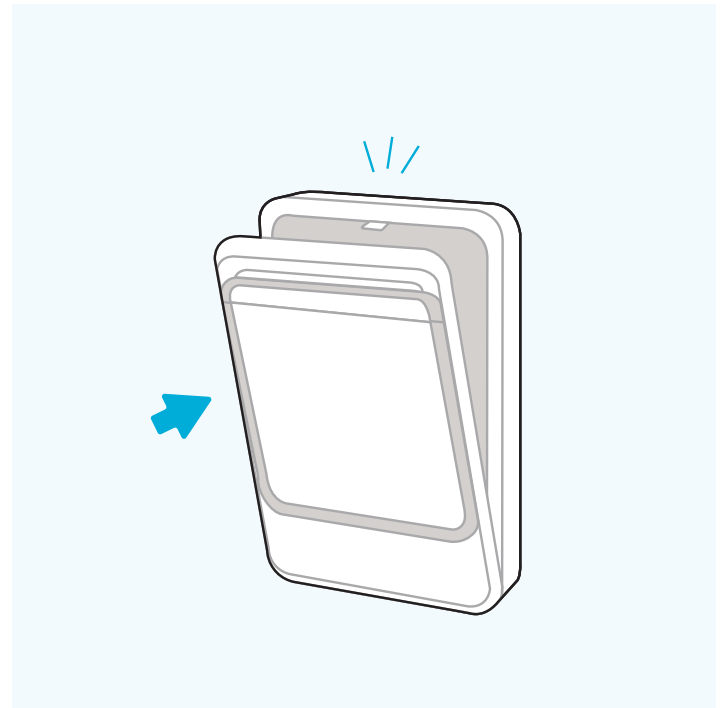**06**


- » Close front panel. You will know it's secure when you hear a click.

# Getting started

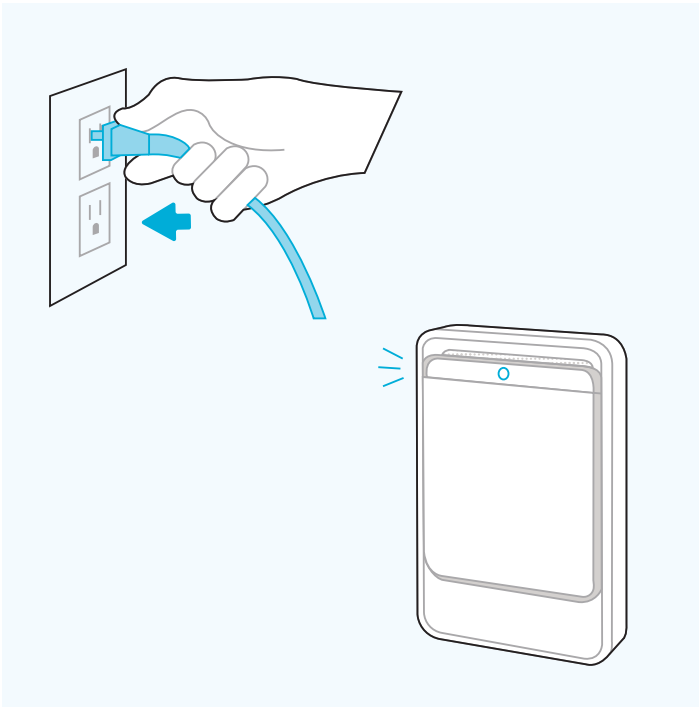


## 07

- » Plug into an outlet and ensure the power switch located at the bottom rear of the unit next to the power cord is switched to the on position.
- » The machine is now powered on and in auto mode.

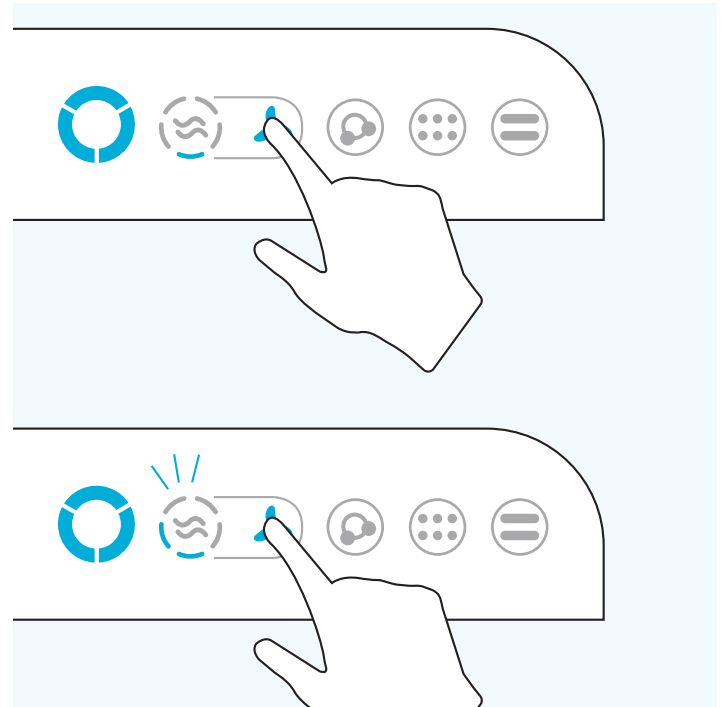


## 08

- » Once the unit is turned on, there is a 1 minute delay before you can manually adjust the fan speed.
- » You can adjust fan speed manually by pressing and holding the fan icon until a beep is heard.
- » The higher the beep pitch, the faster the fan speed.

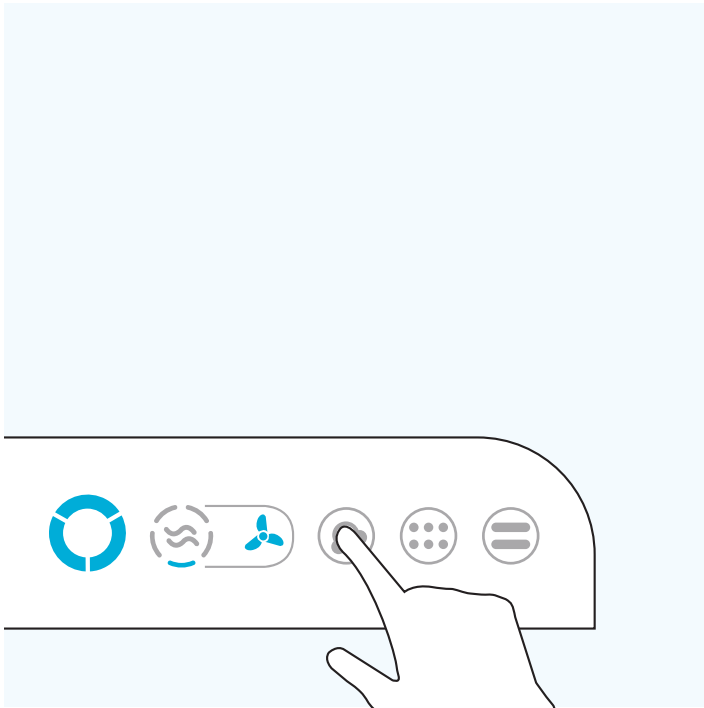

**09**

» Ionizer will be off by default.

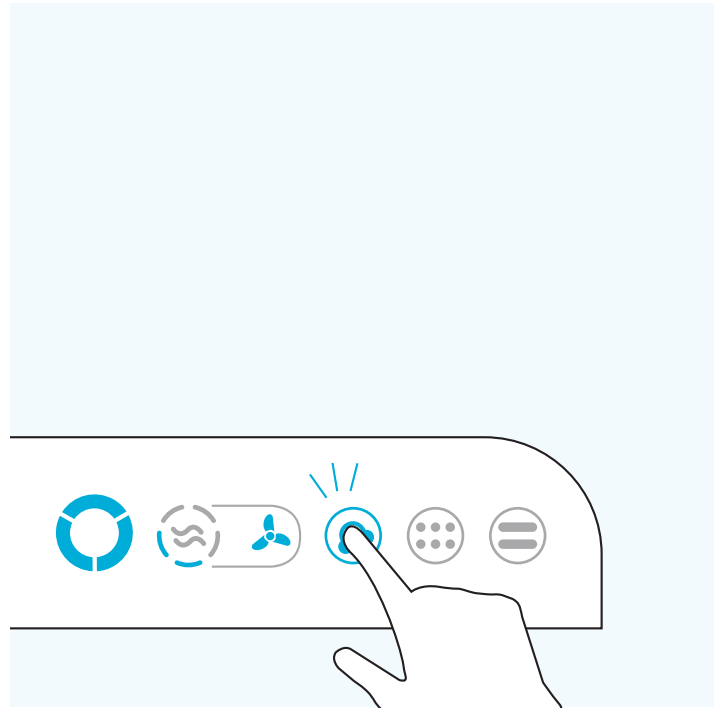

**10**

» To turn on the ionizer, hold down on ionizer icon until it beeps, then release.







---

# Protect What Matters Most

---

Register your product to the AeraMax Protects Program and receive one additional year of warranty protection as well as filter replacement reminders.

**[Fellowes.com/aeramaxprotects](https://Fellowes.com/aeramaxprotects)**



Scan To  
Register Product

